



# IPDL917 INSTRUCTION MANUAL

## Contents

Warnings and Precautions	2
Important Safety Instructions	3
What's in the Box & Features	4
Powering the Unit & Battery Information	5
Quick Start: DVD Player	6
Quick Start: Docking an iPod	7
Quick Start: Playing an iPod	8-9
Operations	10-13
The Setup Menu	14-15
Location of Controls & Control Definitions	16-23
Service Information	24

# Warnings and Precautions

---

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player’s lid is open and the system’s interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**WARNING:** Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

**WARNING:** The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

**WARNING:** Lithium ion and Lithium polymer batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

**WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Important Safety Instructions

**1. Read these instructions.** All the safety and operating instruction should be read before the product is operated.

**2. Keep these instructions.** The safety and operating instruction should be retained for future reference.

**3. Heed all warnings.** All warning on the product and in the operating instructions should be adhered to.

**4. Follow all instructions.** All operating and use instructions should be followed.

**5. Water and Moisture:** Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

**6. Cleaning:** Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

**7. Ventilation:** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**8. Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

**9. Grounding or Polarization:** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

**10. Power-Cord Protection:** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

**11. Accessories:** Only use attachments/accessories specified by the manufacturer. Do not place this product on an unstable cart, stand tripod, bracket, or table. The

product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

**12.** A product and cart combination should be moved with care. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE  
CART  
WARNING

S3125A

**13. Lighting:** Unplug this apparatus and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

**14. Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

 
**15. Power Sources:** Only connect to the type of house-hold power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

**16. Overloading:** Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

**17. Object and Liquid Entry:** Never push objects of any kind or spill liquid into this product through openings as this could result in a risk of fire or electric shock.

**18. Replacement Parts and Safety Check:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

**19. Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna connection to grounding electrodes, and requirements for the grounding electrode.

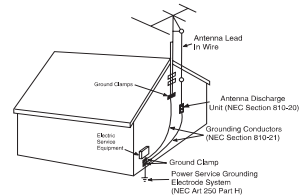

**20. Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.


**21.** Where the AC plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**22. Protective Attachment Plug:** The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

**23. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

# What's in the Box

 ---

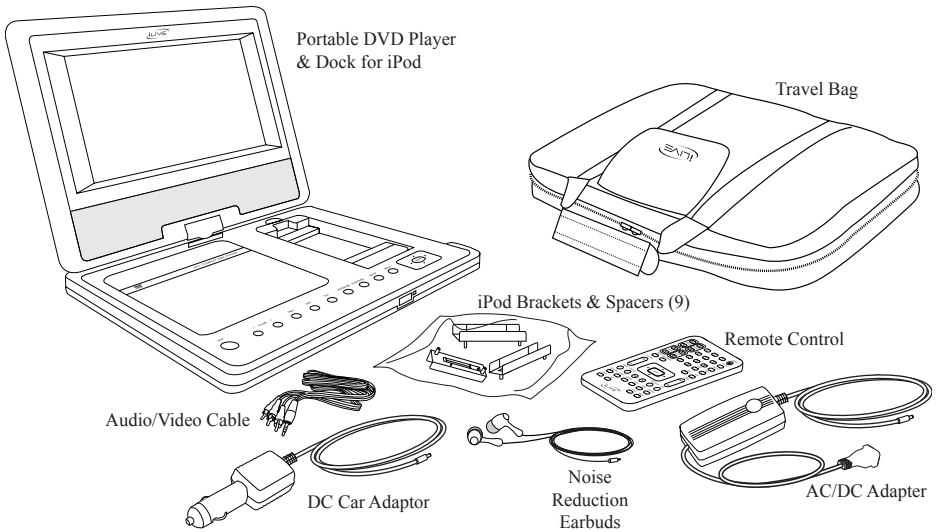

- 
- Portable DVD Player & Dock for iPod
  - Audio/Video Cable
  - DC Car Adaptor
  - Noise Reduction Earbuds
  - iPod Brackets & Spacers (9)
  - Remote Control
  - Travel Bag
  - AC/DC Adaptor

## Features

 
---

- Compatible connections for iPod mini, iPod nano, iPod with photo, and iPod with video
  - Plays DVD, DVD+R/RW, DVD-R/RW, CD, CD-R, and JPEG Discs
  - Multi-Language On-Screen Display
  - SD/MMC Card Reader installed
  - USB Host
  - Dual Headphone Jacks
  - 9" TFT Swivel Display Screen
  - 16:9 Aspect Ratio, NTSC, S-Video & Digital Coaxial Output, Composite Video & 2-Channel Audio Output
  - Built-in Speakers
  - 3-Way Power: Dual-Power AC: 110V - 220V, Rechargeable/Removable Lithium-Polymer Battery Pack, DC: 12V
-


## Powering the Unit

The unit can be powered in three different ways.


- 1 Plug the AC/DC Adapter into a 120V AC Outlet.
- 2 Plug the DC Car Adapter into a DC Car Outlet.
- 3 The internal battery charges when the AC or DC adapters are plugged into power sources. A fully charged battery can last up to 3 hours.

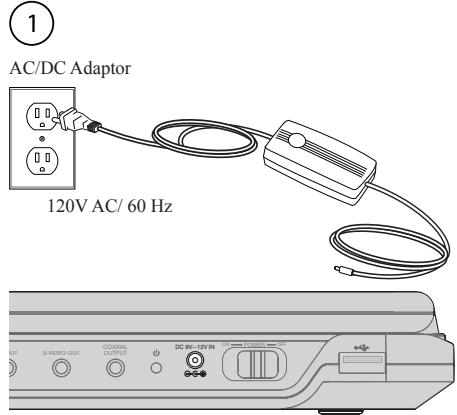

- 2
- DC Car Adapter

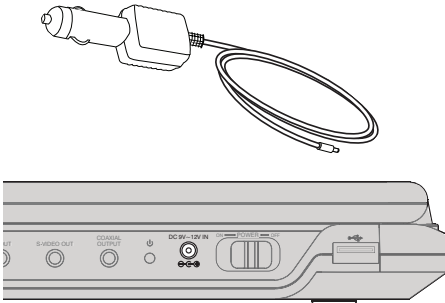 

 - 3
- Rechargeable Lithium Polymer Battery Pack

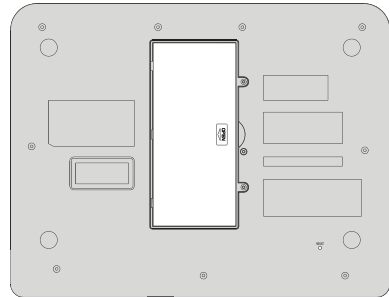


## Battery Information

1. To charge the unit, simply connect it to an AC outlet using the AC/DC Adapter, or connect it to a DC car outlet using the DC Car Adapter.
2. It takes approximately 4-5 hours to charge the unit completely.

*From a full charge, the unit's battery can last up to 3 hours.*

## Quick Start: Playing a DVD

 
1. Plug the unit into a standard 120V outlet, and turn the power on by moving the **Power Switch** into the *ON* position. If the internal battery is charged, the unit does not have to be plugged in.
2. Press the Open Button and load a DVD into the unit's DVD-Drive. Close the DVD Door, and the DVD will start automatically.
3. Use the **Directional Buttons** to navigate through the DVD menu.
4. Press the **Play Button** or **Enter Button** to make selections in the DVD menu.
5. Press the **Pause Button** to pause a DVD during play.
6. Press the **Previous & Next Buttons** to skip backwards and forwards through DVD chapters.
7. Press the **Setup Button** to access the DVD's setup menu.
8. Press the **Menu Button** to go back to the DVD's main menu.

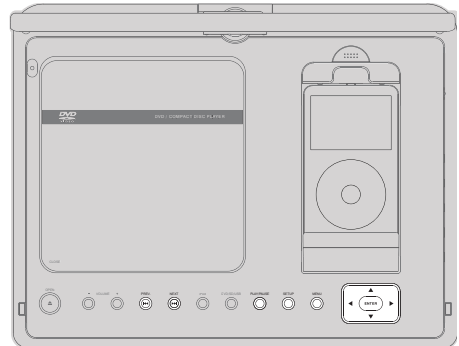


# Quick Start: Docking an iPod

1. Find the matching spacer and bracket that fits the iPod. See the *Dock Inserts* chart below to find which bracket and spacer is needed.
2. Insert the correct bracket over the **Dock Connector** by matching the *pegs* on the bracket to the *holes* on either side of the **Dock Connector**.
3. Snap and lock the correct spacer into the top of the **Docking Station**.
  - The **Dock Connector** is hinged inside the **Docking Station**, allowing an iPod to connect in an upright position or connect and be folded down into the unit.
4. Dock the iPod onto the **Dock Connector**.
5. When connecting an iPod nano or iPod mini, press the **Dock Adjustment Button** to reduce the size of the **Docking Station**.

   
Bracket for iPod

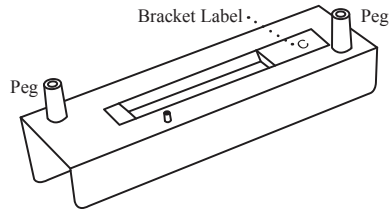



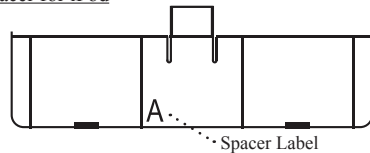

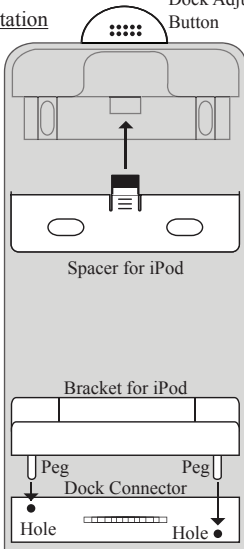


Spacer for iPod



Docking Station      Dock Adjustment Button



## Dock Inserts

Compatible iPods	Bracket	Spacer
 <b>iPod mini</b> 1st generation 4GB 6GB	C	C
 <b>iPod</b> 4th generation 20GB	B	B
 <b>iPod</b> 4th generation (color display) 20GB 30GB	B	—
 <b>iPod nano</b> 1st generation 1GB 2GB 4GB	D	D
 <b>iPod</b> 5th generation (video) 30GB	A	A
 <b>iPod</b> 5th generation (video) 60GB 80GB	E	—
 <b>iPod nano</b> 2nd generation 2GB 4GB 8GB	D	D

## Quick Start: Playing an iPod

---

1. Plug the unit into a standard 120V outlet, and turn the power on by moving the **Power Switch** into the *ON* position. If the internal battery is charged, the unit does not have to be plugged in.
2. Dock an iPod into the unit. *See the “Docking an iPod” instructions on page 7.*
3. Press the iPod Button once to activate *iPod Menu Mode*, or twice to activate *iPod Video Mode*.

*Menu Mode* displays an iPod menu system on the unit’s display, and all iPod functions are controlled from the unit’s controls.

*Video Mode* allows a user to navigate and select songs, photos, or videos directly through the iPod interface, and control all iPod functions from the iPod’s controls.

### Menu Mode

4. In *Menu Mode*, use the **Directional Buttons** and **Enter Button** to navigate through media stored on the docked iPod.
5. In *Menu Mode*, with a song selected, press the **Play Button** or the **Enter Button** to play a song.
6. In *Menu Mode*, press the **Menu Button** to move backwards through the iPod menu system.
7. In *Menu Mode*, press the **Pause Button** to pause the iPod during play. Press the **Stop Button** to stop the iPod during play.
8. In *Menu Mode*, press the **Previous & Next Buttons** to skip forwards and backwards through tracks on a docked iPod.

### Video Mode

4. *Video Mode* allows a user to navigate and select songs, photos, or videos directly through the iPod interface, and control all iPod functions from the iPod’s controls.
5. In *Video Mode*, use the **Directional Buttons** and **Enter Button** to navigate through media stored on the docked iPod.
6. In *Video Mode*, press the **Menu Button** to move backwards through the iPod menu system.
7. In *Video Mode*, with a song selected, press the **Enter Button** to play a song. Press the **Previous & Next Buttons** to skip forwards and backwards through tracks on a docked iPod.

# Playing an iPod

 
 
---



## Menu Mode



## Video Mode

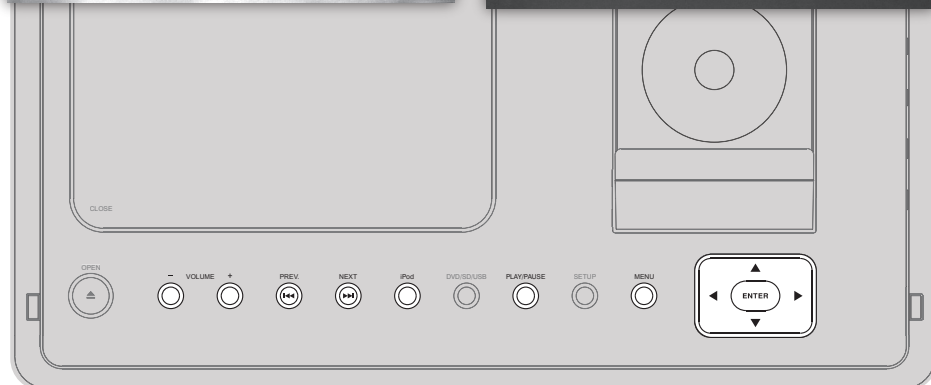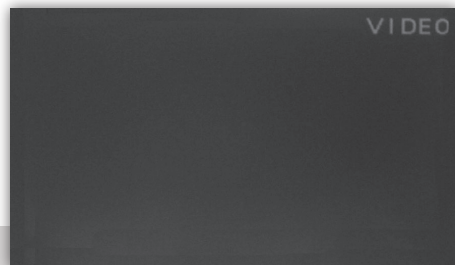

## Playing a CD

---

 
• Besides playing Audio CDs, the unit is capable of playing AVI files and JPEG files off of CDs.

1. Plug the unit into a standard 120V outlet, and turn the power on by moving the **Power Switch** into the *ON* position. If the internal battery is charged, the unit does not have to be plugged in.
2. Press the **Open Button** and load a CD into the unit's DVD-Drive. Close the DVD Door, and the CD will start automatically.
3. Press the **Play & Pause Buttons** to play and pause the CD.
4. Press the **Previous & Next Buttons** to skip backwards and forwards through CD tracks.

## Programming a CD

---

1. Insert a CD into the unit. *See the "Playing a CD" operation.*
2. After the CD is inserted and loaded, press the **Program Button** on the remote control to display the *Program Menu*.

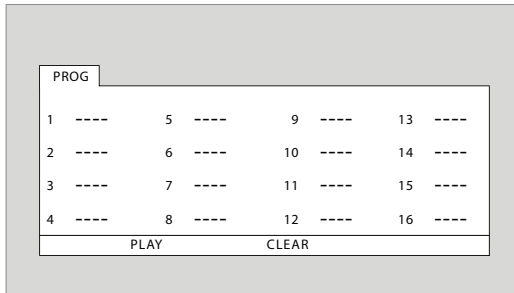

3. Use the **Directional Buttons** to move through the sixteen different program slots.
4. Highlight a slot and enter CD track numbers using the **Number Keypad** on the remote control. Repeat steps 3 and 4 until the desired tracks are programmed.
5. Highlight the "Play" button, on screen, using the **Directional Buttons**, and press the **Enter Button** to begin playing the programmed tracks.

## Playing a DVD

 
---

1. Plug the unit into a standard 120V outlet, and turn the power on by moving the **Power Switch** into the *ON* position. If the internal battery is charged, the unit does not have to be plugged in.
2. Press the **Open Button** and load a DVD into the unit's DVD-Drive. Close the DVD Door, and the DVD will start automatically.
3. Use the **Directional Buttons** to navigate through the DVD menu.
4. Press the **Play Button** or **Enter Button** to make selections in the DVD menu.
5. Press the **Pause Button** to pause a DVD during play.
6. Press the **Previous & Next Buttons** to skip backwards and forwards through DVD chapters.
7. Press the **Menu Button** to go back to the DVD's main menu.

## Programming a DVD

---

1. Insert a DVD into the unit. *See the "Playing a DVD" operation on page 16.*
2. After the DVD is inserted and loaded, press the **Program Button** on the remote control to display the *Program Menu*.

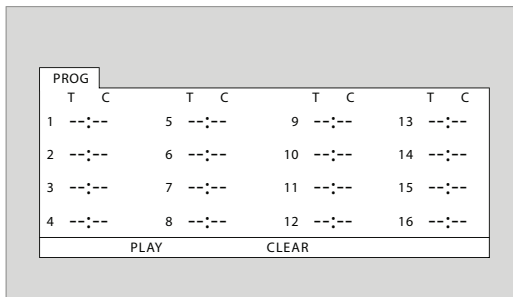


PROG		T	C	T	C	T	C	T	C
1	--:--	5	--:--	9	--:--	13	--:--		
2	--:--	6	--:--	10	--:--	14	--:--		
3	--:--	7	--:--	11	--:--	15	--:--		
4	--:--	8	--:--	12	--:--	16	--:--		
PLAY					CLEAR				

3. Use the **Directional Buttons** to move through the sixteen different program slots.
4. Highlight a slot and enter a *Title (T)* number and *Chapter (C)* number using the **Number Keypad** on the remote control. Repeat steps 3 and 4 until the desired titles and chapters are programmed.
5. Highlight the "Play" button, on screen, using the **Directional Buttons**, and press the **Enter Button** to begin playing the programmed titles and chapters.

## Using the USB Input

 ---

1. Plug a USB thumb drive into the **USB Input**.
2. Switch the unit to *USB Mode* by pressing the **DVD/SD/USB Function Button**. The following display will appear.

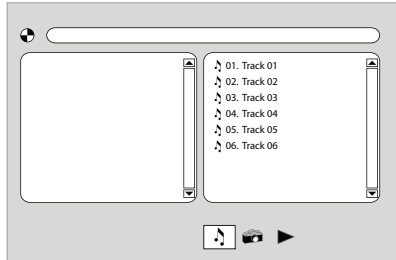


3. Use the **Directional Buttons** to select videos, music, or images. Press the **Enter Button** to play a selected video, music, or image.

• *The unit will play Mp3 and WMA audio files, AVI movie files, and JPEG image files from USB thumb drives. The different file types must be separated into folders for the unit to read them.*

## Using the SD/MMC Memory Card Slot

 ---

1. Plug an SD or MMC memory card into the **SD/MMC Memory Card Slot**.
2. Switch the unit to *SD Mode* by pressing the **DVD/SD/USB Function Button**. The following display will appear.

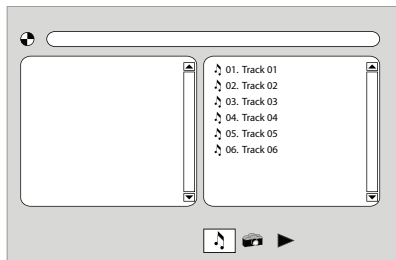

3. Use the **Directional Buttons** to select videos, music, or images. Press the **Enter Button** to play a selected video, music, or image.

• *The unit will play Mp3 and WMA audio files, AVI movie files, and JPEG image files from SD or MMC memory cards. The different file types must be separated into folders for the unit to read them.*

## Audio/Video Output: to a TV or Stereo System

---

*When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)*

1. Plug the 3.5mm end of the included RCA /3.5mm cable, included, into the **Audio/Video Output** on the unit.
2. Plug the other end of the RCA cable into the audio/video input on the TV or stereo system. Select the correct input setting on the TV or stereo system.
3. Audio or Video played on the unit will now be heard and seen through the unit and the TV or Stereo System.

## S-Video Output: to a TV

---

1. Plug the 3.5mm end of an S-Video/3.5mm cable, not included, into the **S-Video Output** on the unit.
2. Plug the other end of the S-Video cable into an S-Video input on the TV. Select the correct input setting on the TV.
3. Video played on the unit will now be seen through the unit and the TV.

## Coaxial Audio Output: to a Stereo System

 
---

1. Plug the 3.5mm end of an coaxial/3.5mm cable into the **Coaxial Output** on the unit.
2. Plug the other end of the coaxial cable into an coaxial audio input on the stereo system. Select the correct input setting on the stereo system.
3. Audio played on the unit will now be heard through the unit and the stereo system.

# The Setup Menu

---

To enter the Setup Menu, press the **Setup Button** on the unit or the **DVD Setup Button** on the remote.

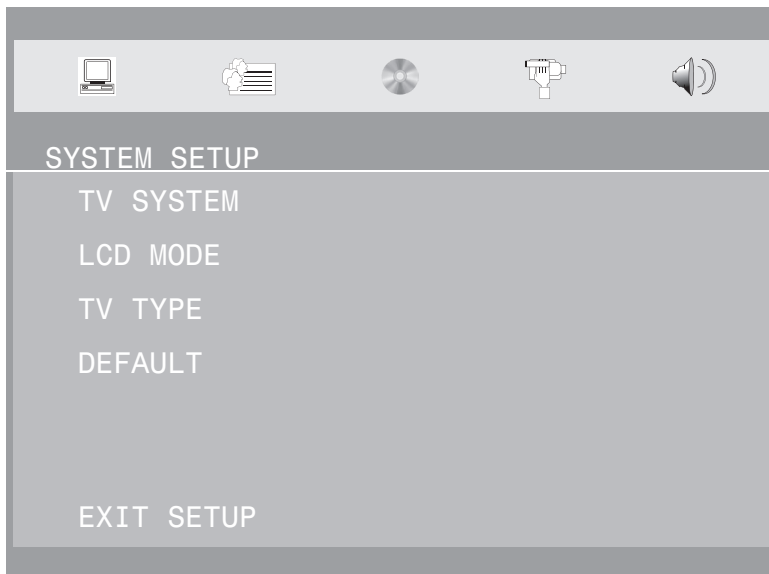

## System Setup

**TV System** Select the TV system that's consistent with the connected television. NTSC is the standard TV System setting for the U.S.A., Canada, and Mexico.

### LCD Mode

- **4:3LB** The 4:3LB (Letterbox) ratio shows the DVD movie in a original format, but with black bars at the top and bottom to fits on a standard TV screen.
- **16:9** The 16:9 ratio shows the DVD movie in its wide screen format. Use this setting when viewing a movie on a wide screen TV.
- Press the **Wide Button**, on the remote, to switch between 4:3 and 16:9 LCD Modes without accessing the Setup Menu.

**TV Type** The ratio of the width of an image to its height.

- **4:3PS** The 4:3PS (Pan & Scan) ratio shows the DVD movie in full screen on a Standard TV.
- **4:3LB** The 4:3LB (Letterbox) ratio shows the DVD movie in a original format, but with black bars at the top and bottom to fits on a standard TV screen.
- **16:9** The 16:9 ratio shows the DVD movie in its wide screen format. Use this setting when viewing a movie on a wide screen TV.

**Default** The **Default Button** will change all settings back to the original factory defaults.

# The Setup Menu

---

## Language Setup

Use the Language Section of the Setup Menu to change the language of the DVD Player's interfaces as well as the DVD subtitles, audio, and menu. Subtitle, Audio and DVD Menu Languages are dependent on the DVD.

**OSD Language** In the OSD (On Screen Display) Language Section choose from English, French, and Spanish as different OSD Languages

**Audio Language** Use the Audio setting to select the audio language of the DVD. The Audio setting is dependent on the DVD's language offerings.

**Subtitle Language** The Subtitle setting allows the user to turn subtitles on and change the subtitle language. The Subtitle setting is dependent on the DVD's language offerings.

**Menu Language** Use the DVD Menu setting to select the written language on the DVD's main menu. The DVD Menu setting is dependent on the DVD in the player.

## Audio Setup

### **Audio Out**

- **Off** The Off setting is used when the Coaxial Audio Output is not connected.
- **RAW** The RAW setting will automatically enable **PCM** in circumstances where it can be used, and automatically disable it when it cannot be used. Like **PCM**, this option also requires the Coaxial Audio Output to be connected to a surround sound receiver.
- **PCM** The Coaxial Audio Output must be connected to a surround sound receiver to take advantage of this feature.

## Video Setup

**Brightness** The **Brightness** can be set to any number between 0 and 12. The default **Brightness** setting is 6.

**Contrast** The **Contrast** can be set to any number between 0 and 12. The default **Contrast** setting is 6.

**Hue** The **Hue** can be set to any number between -6 and +6. The default **Hue** setting is 0.

**Saturation** The **Saturation** can be set to any number between 0 and 12. The default **Saturation** setting is 6.

 
**Sharpness** The **Sharpness** can be set to any number between 0 and 8. The default **Sharpness** setting is 0.

## Speaker Setup


**Downmix** The **Downmix** can be set to RT/LT or STEREO.

- *When connecting to a mono speaker system, use the RT/LT setting.*
- *When connecting to a stereo or surround sound system, use the Stereo Setting.*

# Location of Controls: Top View


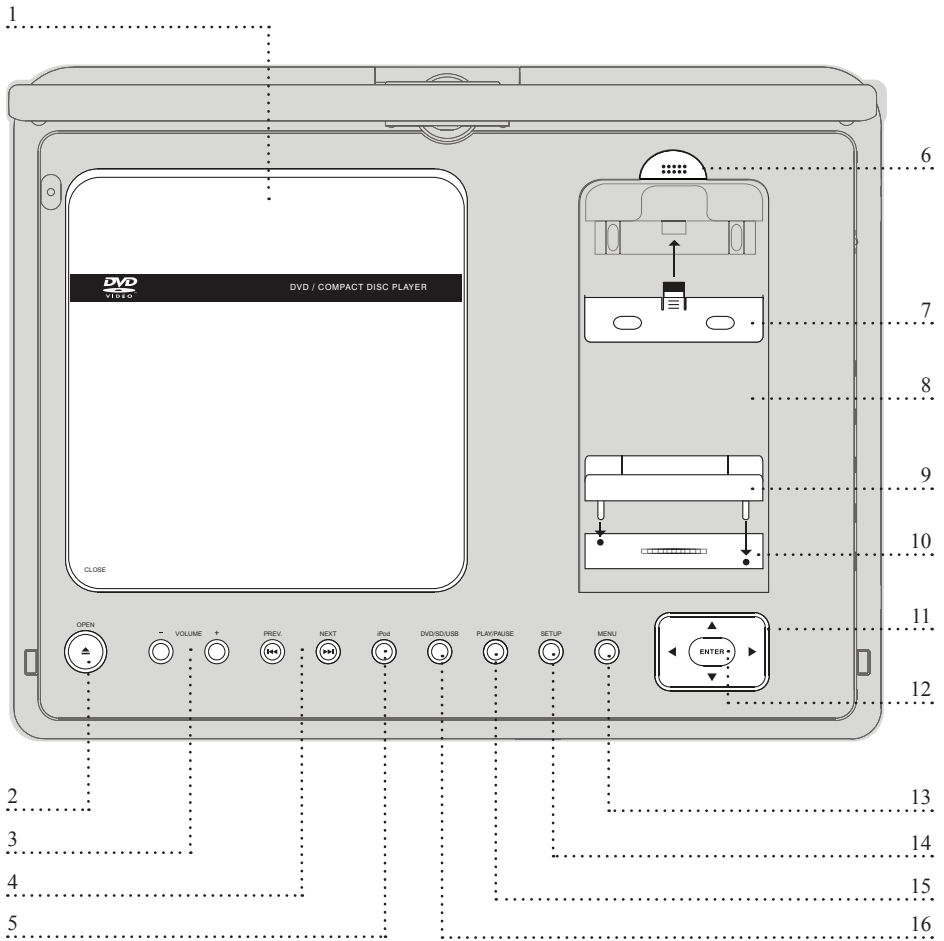


# Location of Controls: Front & Side Views

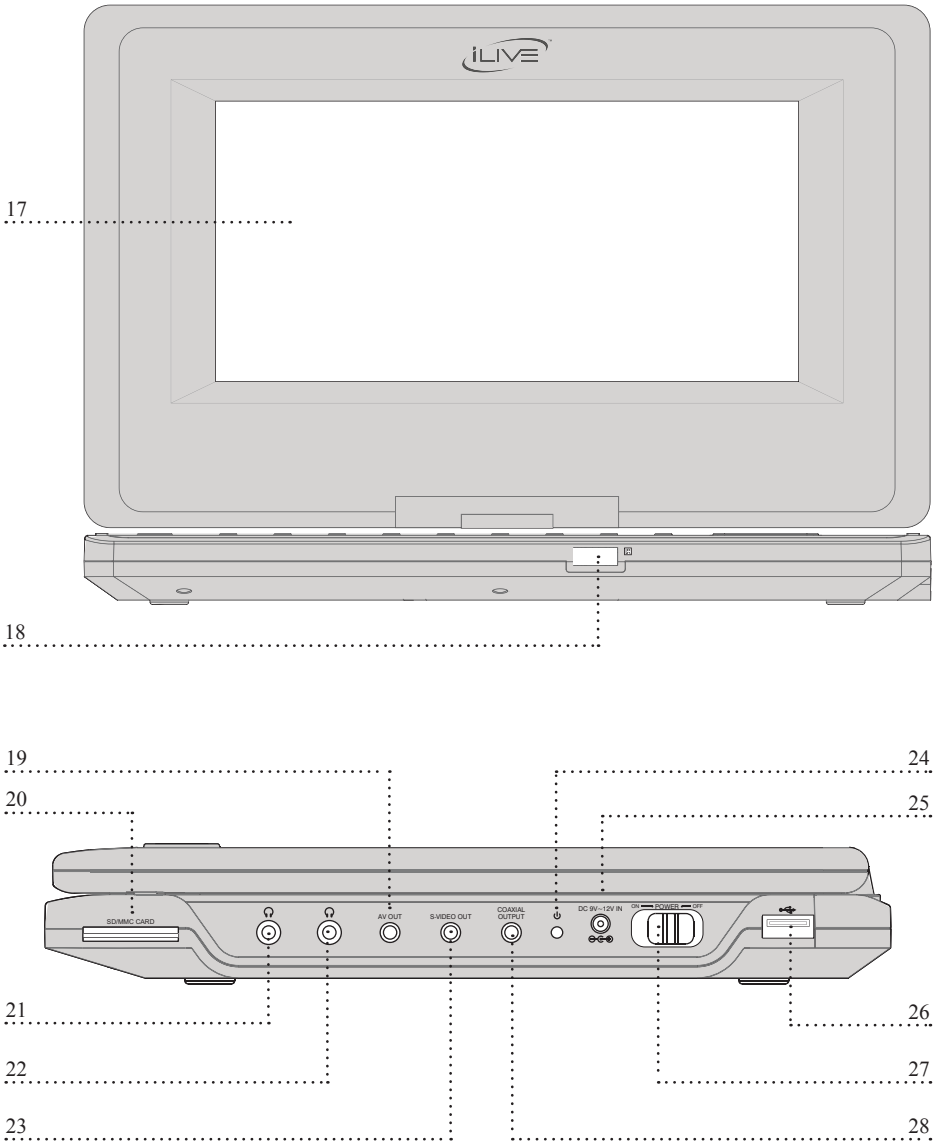 


# Location of Controls: Bottom & Back Views

  ---

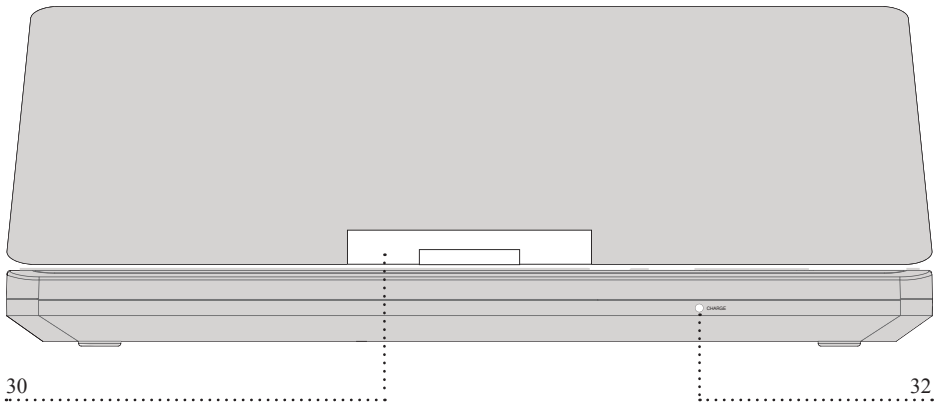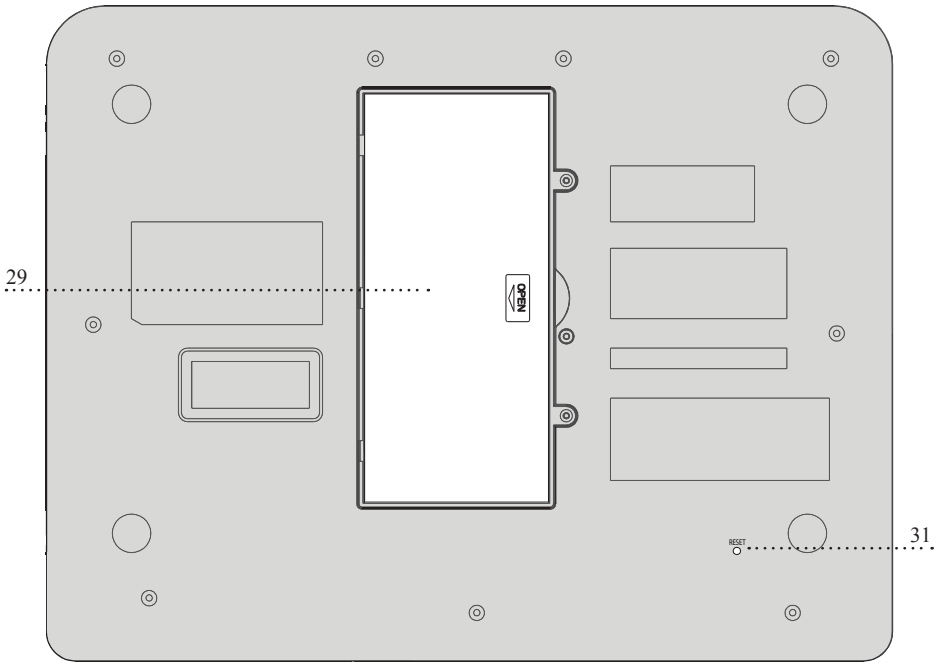

# Location of Controls: Remote View

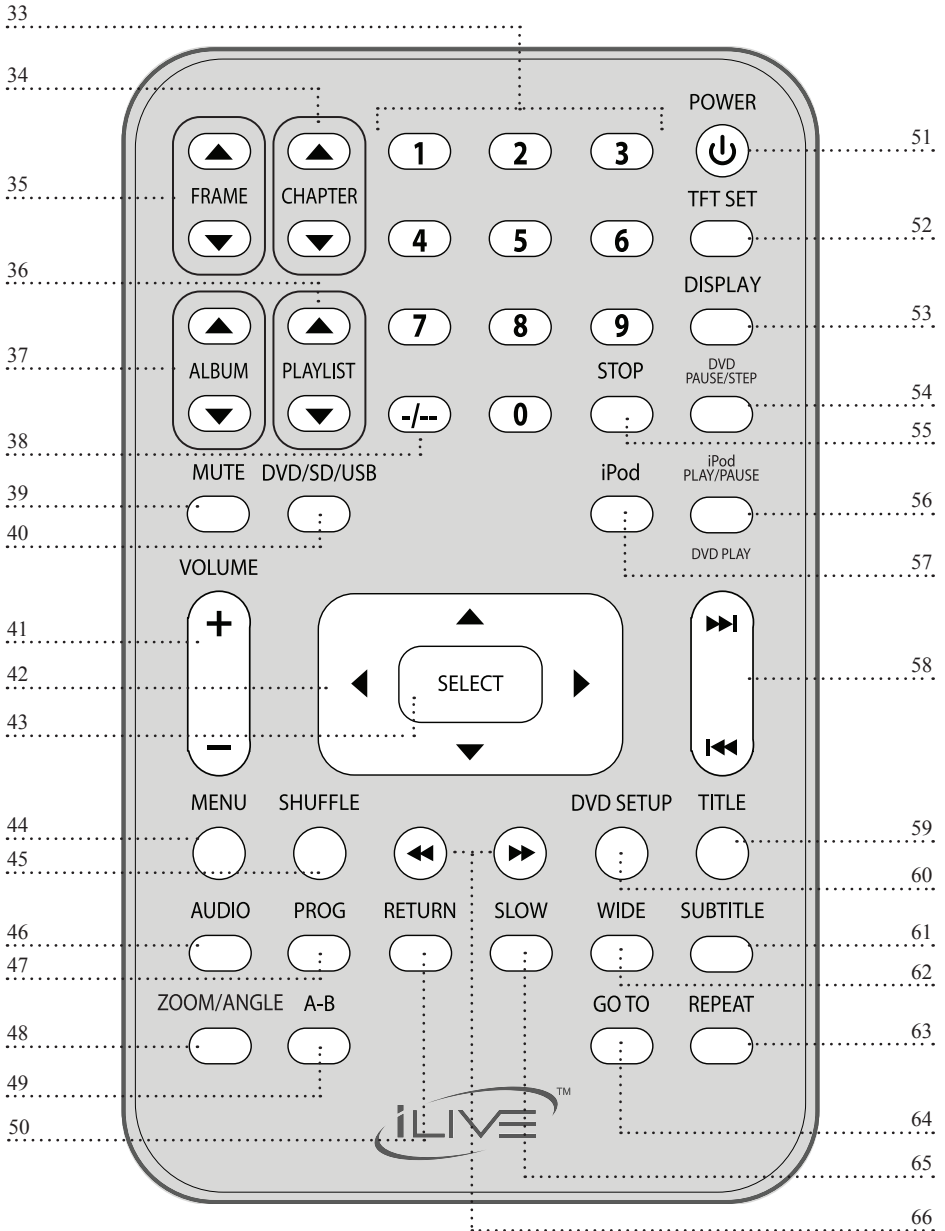 

## Controls: Top View

---

- 1 **DVD Door** The DVD Door houses the DVD/CD Drive.
  - 2 **Open Button** Press the Open Button to open the DVD Door.
  - 3 **Volume Buttons** Press the Volume Buttons to increase (+) or decrease (-) the volume.
  - 4 **Previous & Next Buttons** Press the Previous & Next Buttons to skip backwards and forwards through CD, DVD, and iPod chapters and tracks.
  - 5 **iPod Button** Press the iPod Button to switch the unit to *Menu Mode* or *Video Mode* for iPod.
  - 6 **Dock Adjustment Button** Press the Dock Adjustment Button to adjust the size of the Docking Station for iPod, for iPod nano or iPod mini.
  - 7 **Spacer** The spacers are designed to allow specific iPod models to dock comfortably inside the unit.
  - 8 **Docking Station for iPod** Dock an iPod here to view and control it's content on the unit.
  - 9 **Bracket** The brackets are designed to allow specific iPod models to dock comfortably inside the unit.
  - 10 **Dock Connector** Use the Dock Connector to connect an iPod to the unit.
  - 11 **Directional Buttons** Use the Directional Buttons to navigate through a DVD, CD, or an iPod.
  - 12 **Enter Button** Press the Enter Button to select media on a DVD, CD, or an iPod.
  - 13 **Menu Button** Press the Menu Button in *DVD Mode* to access a DVD's main menu.
  - 14 **Setup Button** Press the Setup Button in *DVD Mode* to access the unit's *DVD Setup Menu*.
  - 15 **Play & Pause Button** Press the Play & Pause Button to play or pause a DVD, CD, or an iPod.
  - 16 **Function Button (DVD/SD/USB)** Press the Function Button to switch between DVD, SD, and USB modes.
- 

## Controls: Front & Side Views

---

- 17 **TFT Display** The full-color TFT Display is a 9 inch display. The brightness, contrast, hue, saturation, and sharpness of the TFT Display can be adjusted in the *DVD Setup Menu*.
  - 18 **Infrared Receiver** The Infrared Receiver receives signals sent from the remote control.
  - 19 **Audio & Video Output** Use the Audio & Video Output to play audio or video from the unit on an external system. (Requires an RCA - 3.5 MM Cable, included)
  - 20 **SD/MMC Memory Card Slot** The SD/MMC Memory Card Slot accepts SD and MMC memory card formats. Media stored on a loaded memory card can be played on the unit by switching to SD mode.
    - The unit will only play AVI, Mp3, WMA, JPG, and JPEG formats from SD or MMC Memory Cards.
  - 21 **Headphone Output 1** Use the Headphone Output 1 to listen to the unit through a set of headphones. (Requires Headphones, one set included)
  - 22 **Headphone Output 2** Use the Headphone Output 2 to listen to the unit through a set of headphones. (Requires Headphones, one set included)
  - 23 **S-Video Output** Use the S-Video Output to play video from the unit on a connected television. (Requires an S-Video - 3.5MM Cable, not included)
-

## Controls: Front & Side Views

---

- 24 **Power Indicator** The Power Indicator lights when the unit is turned on.

---

- 25 **DC Power Input (9V - 12V)** Connect the DC Power Input to power the unit and charge the internal battery. (AC Adapter & DC Car Adapter included)

---

- 26 **USB Input** Use the USB Input to connect a USB Thumb Drive to the unit. Media stored on the USB Thumb Drive can be played on the unit by switching to USB mode.

---

- 27 **Power Switch** Adjust the Power Switch to turn the unit off and on.

---

- 28 **Coaxial Audio Output** Use the Coaxial Audio Output to play audio from the unit on a connected stereo system. (Requires a Coaxial-3.5MM Cable, not included)

## Controls: Bottom & Back Views

---

- 29 **Battery Compartment** The Battery Compartment holds a Lithium Polymer Battery that powers the unit when charged. The battery can be charged by plugging the unit into an AC or DC power source using the included adapters.

---

- 30 **Swivel Joint** The Swivel Joint allows the unit's display to be turned 180 degrees, in one direction, and fold down on itself tablet style.

---

- 31 **Reset Button** Press the Reset Button to restore the unit to its original factory settings.

---

- 32 **Charge Indicator** The Charge Indicator blinks when the unit's internal battery is being charged. The Charge Indicator remains lit, without blinking, when the battery is fully charged.

## Controls: Remote View

---

- 33 Number Keypad** Use the Number Keypad when entering numbers in for operations.
- 
- 34 Chapter Buttons** In *Video Mode* for iPod, press the Chapter Buttons to cycle through movie chapters from an iPod.
- 
- 35 Frame Buttons** In *Video Mode* for iPod, press the Frame Buttons to cycle through an albums frames from an iPod.
- 
- 36 Playlist Buttons** In *Video Mode* for iPod, press the Playlist Buttons to cycle through playlists from an iPod.
- 
- 37 Album Buttons** In *Video Mode* for iPod, press the Album Buttons to cycle through albums from an iPod.
- 
- 38 +10 Button** Press the +10 Button when entering numbers greater than 10.
- 
- 38 Mute Button** Press the Mute Button to mute the unit's volume.
- 
- 39 Function Button (DVD/SD/USB)** Press the Function Button to switch between DVD, SD, and USB mode.
- 
- 40 Volume Buttons** Press the Volume Buttons to increase or decrease the volume.
- 
- 41 Directional Buttons** Use the Directional Buttons to navigate through a DVD, CD, or an iPod.
- 
- 42 Select Button** Press the Select Button to select media on a DVD, CD, or an iPod.
- 
- 43 Menu Button** Press the Menu Button in DVD Mode to access a DVD's main menu.
- 
- 44 Shuffle Button** In *Video Mode* for iPod, press the Shuffle Button to play media from an iPod in shuffle mode.
- 
- 45 Audio Button** In *DVD Mode*, press the Audio Button to cycle through available audio languages for a specific DVD.
- 
- 46 Program Button** In *CD or DVD Mode*, press the Program Button to program tracks or chapters and titles to play in a designated order. (See the Operations section for instructions on Programming a CD or DVD)
- 
- 47 Zoom & Angle Button** In *DVD Mode*, press and hold the Zoom Button to zoom in and out during a DVD movie. In *DVD Mode*, press the Angle Button to view alternate angles.
- The Angle Button will only work with compatible DVDs.
- 
- 48 A-B Repeat Button** Press the A-B Repeat Button once to designate an "A" point. Press the A-B Repeat Button a second time to designate a "B" point and repeat the section of DVD movie between point "A" and point "B".
- 
- 49 Return Button** Press the Return Button to return to the previous menu of a DVD.
- 
- 50 Power Button** Press the Power Button to turn the unit off and on.
- 
- 51 TFT Set Button** Press the TFT Set Button to adjust the Contrast, Brightness, or Color of the TFT Display.
- 
- 52 Display Button** In *CD or DVD Mode*, press the Display Button to view the track or title and chapter information, as well as the play time.
- 
- 53 DVD Pause & Step Button** In *DVD Mode*, press the DVD Pause & Step Button once to pause a DVD during play. Press the DVD Pause & Step Button consecutively to skip one frame at a time while playing a DVD.
- 
- 54 Stop Button** Press the Stop Button to stop a CD, DVD, or iPod during play.
-

## Controls: Remote View

---

- 55 iPod Play & Pause Button** Press the iPod Play & Pause Button to play or pause a docked iPod.
- 
- 56 iPod Button** Press the iPod Button to switch the unit to *Menu Mode* or *Video Mode*.
- 
- 57 Previous & Next Buttons** Press the Previous & Next Buttons to skip backwards and forwards through CD, DVD, and iPod chapters and tracks.
- 
- 58 Title Button** In *DVD Mode*, press the Title Button to view the title screen on a DVD.
- The Title Button will only work with compatible DVDs.
- 
- 59 DVD Setup Button** In *DVD Mode*, press the DVD Setup Button to access the *DVD Setup Menu*.
- 
- 60 Subtitle Button** In *DVD Mode*, press the Subtitle Button to cycle through available subtitle options for a specific DVD.
- 
- 61 Wide Button** In *DVD Mode*, press the Wide Button to switch between a 4:3 viewing ratio and a 16:9 (wide screen) viewing ratio.
- 
- 62 Repeat Button** Press the Repeat Button once to repeat an individual track of a CD. Press the Repeat Button twice to repeat an entire CD.
- 
- 63 Go To Button** In *DVD Mode*, press the Go To Button to type in, using the Number Keypad, a specific title and chapter number or DVD time, and go to that spot on the DVD immediately.
- 
- 64 Slow Button** In *DVD Mode*, press the Slow Button to view a DVD movie in slow motion.
- 
- 65 Rewind & Fast Forward Buttons** Press the Rewind & Fast Forward Buttons to rewind or fast forward through a CD track, DVD movie, or iPod media.



## Service Information

**Address** 2116 Carr Street, St. Louis MO, 63106

**Phone** 1-314-621-2881

**Fax** 1-314-588-1805

**Email** [customerservice@ilive.net](mailto:customerservice@ilive.net)

**Website** [www.ilive.net](http://www.ilive.net)

---

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.ilive.net](http://www.ilive.net).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.ilive.net](http://www.ilive.net).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.ilive.net](http://www.ilive.net).