

FRONTGATE®

OUTFITTING AMERICA'S FINEST HOMES®

PLEASE READ

SAFETY RECOMMENDATIONS:

- FOR OUTDOOR USE ONLY
- NOT FOR USE ON WOOD DECKS OR OTHER FLAMMABLE SURFACES
- ALWAYS PLACE ON EVEN GROUND
- NEVER USE THE FIRE PIT CLOSER THAN 10 FEET FROM ANYTHING FLAMMABLE, INCLUDING HOUSES OR OVERHEAD TREE BRANCHES
- NEVER USE GASOLINE, KEROSENE, OR ANY OTHER LIQUID FUEL TO START A FIRE
- ALWAYS MAINTAIN A SAFE DISTANCE FROM THE FIRE
- ALWAYS SUPERVISE CHILDREN AROUND THE FIRE
- NEVER LEAVE A FIRE UNATTENDED
- ITEM IS HOT DURING AND AFTER USE; ALWAYS ALLOW AMPLE COOLING TIME BEFORE TOUCHING OR MOVING